


Assembly instructions: release knob on hinge side

- 1 Space door to floor:** min. 20 up to max. 45 mm
- 2 Groove size:** min. 48 mm deep and 14,1 mm large, as far as possible away from pivot (figure 2). The **Planet GH** may not jam in the groove.
- 3 To shorten:** max. 125 mm in released condition with regard to the release knob. Remove any sawdust. At maximum stroke the **Planet GH** shows a lateral displacement of 10 mm of the sealing lip. The assembly is flush on hinge side, cut shorter by approx. 1 – 2 mm on lock side.
- 4 Fastening:** fasten the **Planet GH** one-side at the door lower surface by nails.
- 5 In case of a wooden frame:** drive home the stainless steel plate in the center of the pressure mark.
- 6 Stroke adjustment:** by rotating the release knob with a suitable screwdriver. The stroke adjustment is correct for 30 mm air space to the floor at 4 mm air space on frame and secured by a medium strong screw locking, secure again at a possible displacement.
- 7 Adjustment:** The **Planet GH** has to be adjusted until the sealing lip seals exactly on the floor when the door is closed. Sound absorbing doors: provide in any case for a floor rail and a floor separation (e.g. **Planet F** or **Planet BT**).



max. stroke 38 mm, 20mm = 45 dB
height of seal up to 45 mm

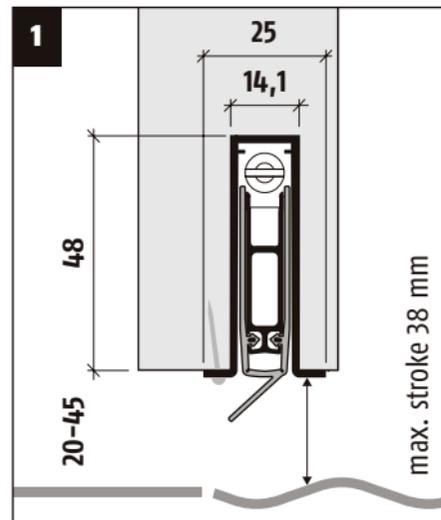